


Planning Your KL100 Space

	Crated	Empty	Installed & Filled
Dimensions	39"W x 69"D x 91"H	30"W x 58 1/3"D x 78¼"H	30"W x 58 1/3"D x 78¼"H
Weight	1,550 lb.	1,206 lb.	1,415 lb. (approx)

Power, Network & Floorplan Considerations:

- Dedicated power drop needed, standard 110v; normal operation draws up to 300w/hour, not to exceed 500w. Two power cables extend from the device's top.
- CAT-5 data cable connected to open port on pharmacy's network. CAT-5 cable extends from the device's top.
- Power drop and data cable ideally connected from ceiling, or pole from floor.
- Allow clearance based on the diagram below.

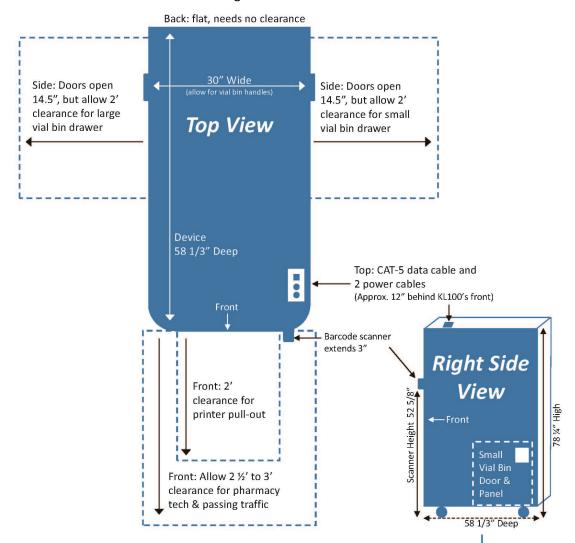

13700 Irma Lee Court Lake Forest, IL 60045 USA 847.984.3377 www.kirbylester.com